

CRB-PRO ADAPTER PLATE INSTRUCTIONS

Thank you for purchasing the CRB Pro Adapter Plate. This unit is designed to allow the integration of your CRB Pro Roller Stand to C-Channel track systems. This unit is fully assembled and in just a few minutes you will be ready to wrap.

LIST OF CONTENTS:

- A. Adapter Plate
- **B.** Base Plate
- C. Rubber Gasket
- D. Threaded Bolts (2)
- E. Tension Springs (2)
- F. Washers (2)
- G. Tension Knobs (2)













1. The T-Bolts, springs, and tension knobs need to be removed from your current CRB PRO Roller Stand. You will be using the supplied hardware included with your adapter plate.



2. With the Adapter Plate resting on a flat surface, unscrew each round tension knob (G) and remove. Remove each washer (F) and tension spring (E) from the threaded bolt. Keep these close at hand as you will use them during reassembly.



3. Slide the base of the Roller Stand Support over the threaded bolts (D) and into position on the adapter plate (A,B,C). It will recess into the adapter plate.



4. Slide each tension spring (E) back over each threaded bolt (D). The wide end of the spring should be facing down and resting on the Roller Stand Base. Place each washer (F) on top of each tension spring (E).



5. Add each tension knob (G) to each threaded bolt (D). Give them a few full revolutions to properly seat the knob. Additional tightening will be needed once the adapter plate is on the track. You are now ready to slide the CRB PRO Roller Stand with Adapter Plate onto your C-Channel Track System.




6. Start at the open end of your C-Channel track System. Using your thumbs, depress the tension springs by pushing on the tops of the tension knobs. This will allow the base plate to separate from the adapter plate providing room to slide onto the track. Once you release the tension springs the base plate and rubber gasket will make contact with the underside of the C-Channel track holding it firmly in place.



7. Before you begin wrapping you will need to adjust the tension knobs (G) ensuring there is a secure hold before wrapping begins. **You are now ready to wrap like a PRO!**

NOTES:

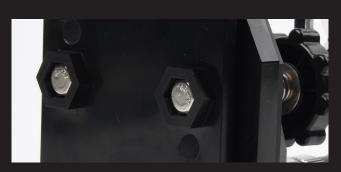

The threaded bolts rest in a slot under the baseplate. There is no need to remove the bolt. If it becomes unseated it will not allow the tension knob to fully tighten. To prevent the bolt from moving, assemble the adapter plate on a flat surface.



Make sure the roller stand is facing the correct direction so it does not cover the channel for your thread carriage.





VISIT MUDHOLE.COM/ADAPTER FOR VIDEO INSTRUCTIONS ON HOW TO INSTALL!